



P. O. Box 509
Vader, WA 98593
USA
360-295-3856

www.mtnloom.com
custserve@mtnloom.com

01/03 jea

HAND LEVER CORD INSTRUCTIONS

The **Loom Cord** is made of polyester silk, machine crocheted in two parallel rows connected at 12mm (about 1/2") intervals to form a series of buttonholes.

Cord length is determined by measuring the distance between parts of the loom to be connected plus the amount needed for the connections.

Fuse the cut ends in a flame - candle, lighter, and gas burner - in an open space.

Connecting Pegs are used to secure the loom cord connection. Never use the last hole at the end of a cord; always use at least the second hole from the end.


The **Hand Lever Cord** is wrapped through the hole at the end of the lever. (Drawing #1)

The cords must drop from the end of the hand levers over the back side of the steel bar and down through the castle top. (Drawing #2) The cords must be attached so that they drop from the unobstructed side of the hand lever.

Eyelets on the underside of the castle top guide the cord to the corresponding harness. (Drawing #3)

Use peg to connect hand lever cord around top harness bar. (Drawing #4)


Drawing #1

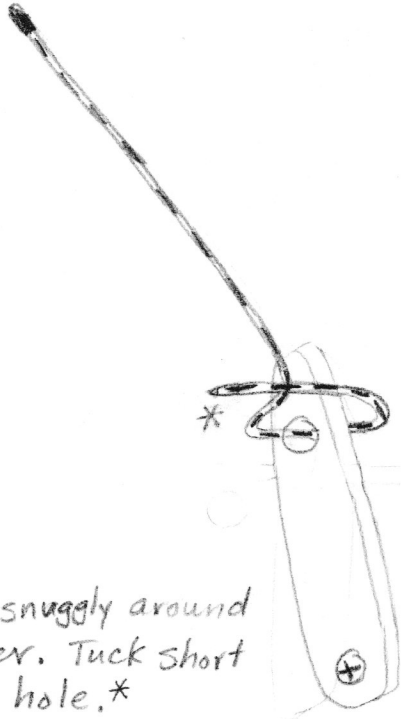


Pull cord snugly around hand lever. Tuck short end into hole.*

Cord route for hand levers on left side of Lever Block. Reverse for hand levers on Right Side of Lever Block.

Drawing #2

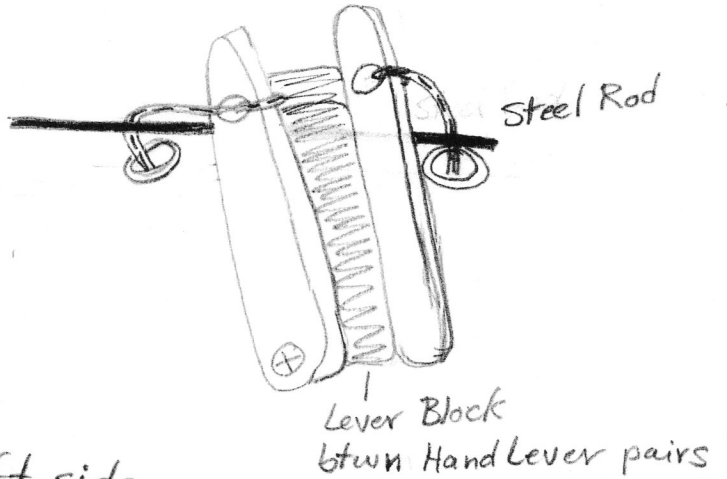

Drawing #3

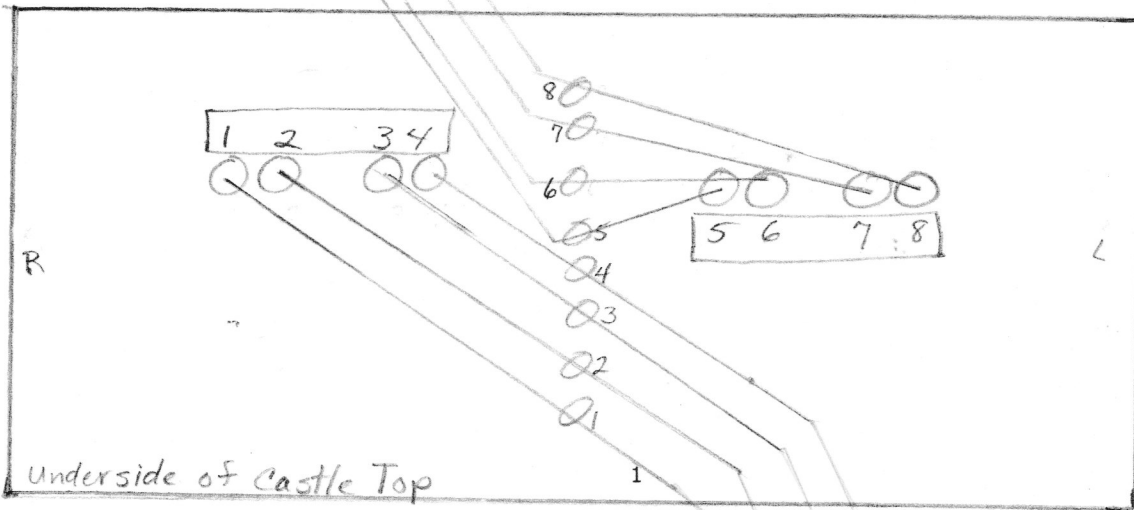

Underside of Castle Top

Drawing #4

